



# HOW TO CHANGE A ZIPPER HEAD

Area:	Stuffing / packaging
Created	Ronald Sais
Date	03-04-15
Sheet	1 of 1

Models:	All models	Rev:	Rev.0	Description	Steps to change a zipper head
---------	------------	------	-------	-------------	-------------------------------


## START WITH THE COVER WITHOUT FOAM AND MOVE THE ZIPPER HEAD TO THE END OF THE CHAIN



**STEP 1:** Start with the cover positioned like the picture and cut only the thread that is over the plastic teeth on the zipper chain.



**STEP 2:** Back the zipper head back out so the head is disconnected from the zipper chain

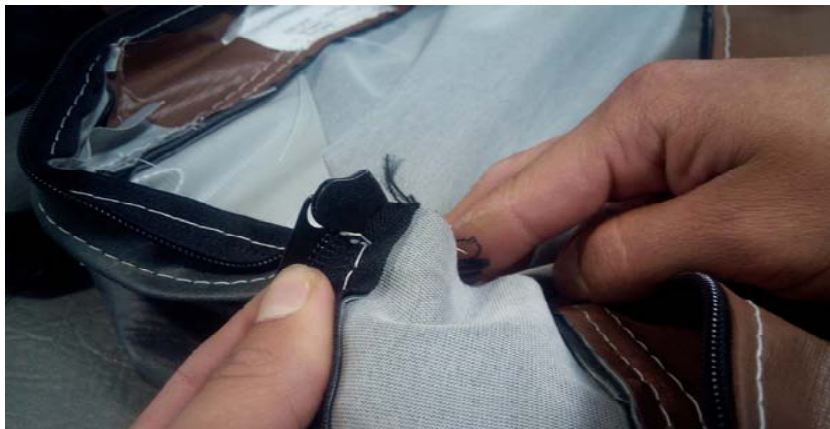

**STEP 3:** Replace or reconnect the zipper head to the chain. Once the head is engaged in both sets of teeth advance the head 3 to 4 inches ahead



**STEP 4:** Add a small amount of super glue only to the very end of the zipper chain as shown in the picture and let it dry for around 5 min. (make sure the zipper head is not close to the super glue)